



REVOLUTIONARY INDUCTION COOKER

THE
HEALTHY WAY OF COOKING
A must-have for every kitchen

I .Specifications

- 1). Item No.: BT-180B
- 2). Power Rate: 500W-1800W (1-5 level)
- 2). Voltage: 220V~240V / 50Hz~60Hz
- 3). Temperature: 60°C-240°C

II .Caution

- 1). Do not plug in cord with wet hands.
- 2). Do not plug into a socket where several other appliances are plugged in.
- 3). Do not use if the plug cord is damaged or the power plug does not fit the socket safely.
- 4). Do not modify the parts or repair the unit yourself.
- 5). Do not use the unit near open flames or wet areas.
- 6). Do not use where children can easily touch the unit, or allow children to use the unit by themselves.
- 7). Do not place on unstable surfaces.
- 8). Do not move the unit when a pot or pan is on it.
- 9). Do not heat an empty pot, or do not overheat the pot.
- 10). Do not place metallic objects such as knives, forks, spoons, lids, cans and aluminum foils on the top plate.
- 11). Use the unit with sufficient space around it. Keep the front side and either right or left side of the unit clear.
- 12). Do not use the unit on carpet or tablecloth (vinyl) or any other low-heat-resistant materials.
- 13). Do not place a sheet of paper between the pot or pan and the unit.
- 14). If the surface is cracked, switch off and take to the service center immediately.
- 15). Do not block air intake or exhaust vent.
- 16). Do not touch the top plate right after removing the pot or pan, as the top plate will still be very hot.
- 17). Do not place the unit near objects which are affected by magnetic fields, such as radios, televisions, automatic-banking cards and cassette tapes.
- 18). The power cord must be replaced by qualified technicians.

III .How to Use

- 1). Place suitable cooking utensils in the center of the top plate and plug in.
- 2). Press the Power button. You will notice “_ _ _” in the digital display. Press the Power button again. The default temperature is 120°C. The temperature can be adjusted from 60°C to 240°C by pressing “▲” or “▼”.
- 3). If there is no operation in two hours, the unit will be switched off automatically.
- 4). When the container is removed during operation, the induction cooker will make a beeping sound. Th unit will be switched off automatically after 60 seconds.
- 8). This appliance will get very hot during use.

IV .Usable and Non-usable Utensils


1). Usable Pans:

Steel or cast iron, enameled iron, stainless steel, flat-bottom pans/pots with diameter from 8 to 26cm.



2). Non-usable Pans:

Heat-resistant glass, ceramic container, copper, aluminum pans/pots. Rounded-bottom pans/pots with bottom measuring less than 12cm.

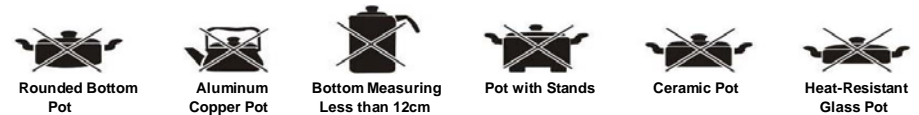

V .How to Clean

- 1). Disconnect the plug and wait until the unit is cooled down completely. Clean after use.
- 2). If the pots/pans are used without being cleaned, discoloration or stains may be caused.
- 3). Do not use benzene, thinner, scrubbing brushes or polishing powder to clean the induction cooker.
- 4). Wipe the induction cooker, using a dish washing agent and damp cloth.
- 5). Use a vacuum cleaner to remove dirt from the air intake and exhaust vent.
- 6). Never run water over the unit. (Water gets inside the unit and may cause malfunction).

Visit our website at www.sunsetcookware.co.za or
Email us at info@sunsetcookware.co.za